

# GENEE **VISION**<sup>®</sup> 8100



**GENEE SOLUTIONS**  
INDIA PRIVATE LIMITED  
An ISO 9001:2008 certified company

# GENEE **VISION**<sup>®</sup> 8100



Tel: 011-49554955 @ Email: info.india@geneeworld.com, sales.india@geneeworld.com  
www Website: www.genee-india.com, www.geneeworld.com Fax: 011-49554956  
Post - B-15, Ram Dutt Enclave, (Near Uttam Nagar East Metro Station), Uttam Nagar, New Delhi-110059, India

## User manual

For more information...  
Call us: 011-49554955

# PRECAUTIONS



**WARNING!**  
Risk of electric shock  
Dangerous voltage inside

Please follow these precautions:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent electrical shock, do not open the cabinet. Refer to qualified personnel for service only.

Do not use the unit continuously for more than 24 hours with camera auto focus on. It may cause damage to the camera lens.

Be careful not to spill water or other liquids onto the unit, or allow combustible or metallic objects to get inside the cabinet.

Unplug the visualiser from the wall outlet when it is not being used for a long period of time.

Clean the cabinet with a soft cloth lightly moistened with a mild detergent solution.

 
Clean the lens carefully with an air spray or soft dry cloth to avoid scratching it.

When the lamps flash or become dark, they should be replaced with new ones.


Avoid switching arm lights and back light frequently.

Remove the camera lens cap before power the unit on.

## PARTS IDENTIFICATION

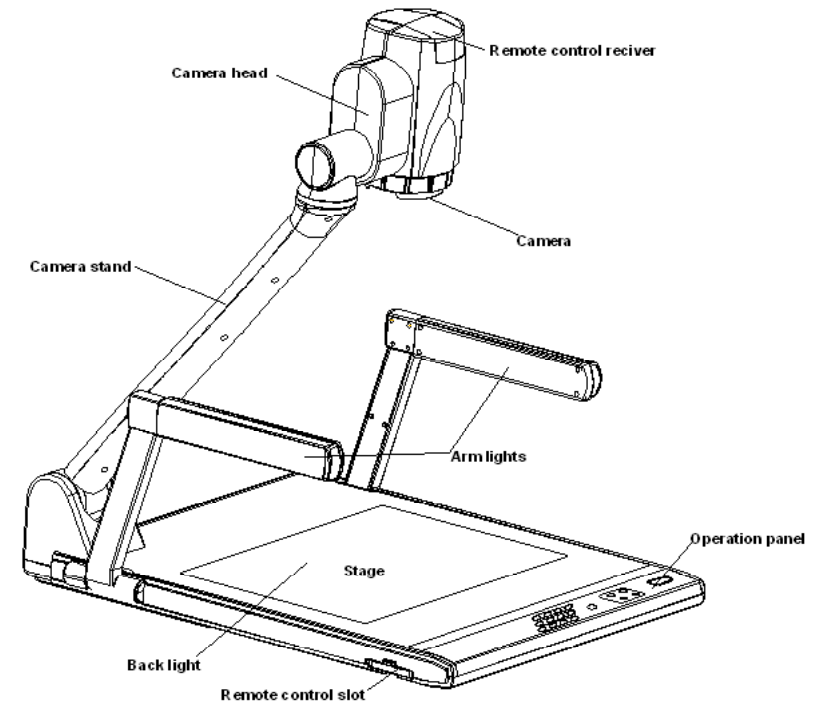

## CONTROL PANEL

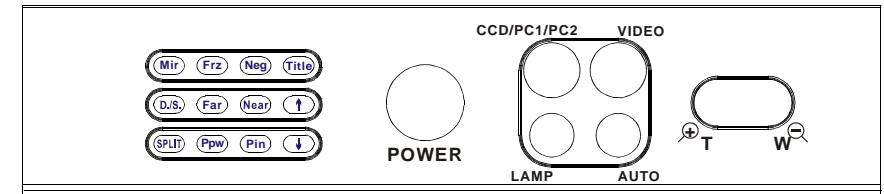 


POWER (Control the visualiser On/Off)  
 Mir (V-reverse the image)  
 Frz (Freeze the image)  
 Neg (Display film negatives)  
 Title (Freeze the top 1/8 of the screen)  
 D./S. (Switch between static mode and dynamic mode)  
 Far/Near (Focus far or near)  
 Split (Image Split function)  
 Ppw (Control the projector On/Standby)  
 Pin (Projector input signal selection)  
 ↑/↓ (Move the image up/down)  
 CCD/PC1/PC2 (CCD/RGB input signal selection)  
 S-VIDEO /VIDEO (Video input signal selection)  
 LAMP (Control the arm lights and back light)  
 AUTO (To auto adjust white balance and auto focus)  
 T/W (Increase and decrease the magnification)

**Remarks:** Frz, Title, D./S. and Split functions are only available on PROJECTOR OUT port.

## BUTTON INSTRUCTION

 Button function instruction shee

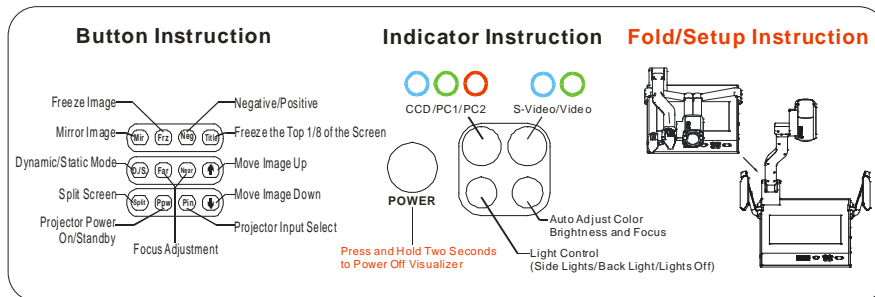

## REMOTE CONTROL



POWER (Control the visualiser On/Off)  
 SAVE (Save captured images)  
 RECALL (Display saved images)  
 EXIT (Exit RECALL mode)  
 LAMP (Control the arm lights and back light)  
 FREEZE (Freeze the image)  
 NEG (Display film negatives)  
 MIRROR (V-Reverse the image)  
 SPLIT (Image split function)  
 D./S. (Switch between static mode and dynamic mode)  
 XGA (Switch between XGA (1024 x 768) and SVGA (800 x 600) mode)  
 B&W (Switch between colour mode and B&W mode)  
 TITLE (Freeze the top 1/8 of the screen)  
 PROJECTOR POWER (Control the projector On/Standby)  
 PROJECTOR INPUT (Projector input signal selection)  
 TEXT (Switch between image/text mode)  
 AUTO (To auto white balance and auto focus)

## BASIC PREPARATIONS

TELE/ WIDE (Increase and decrease the magnification)

FAR/NEAR (Focus near or far)

VOL+/VOL- (Increase or decrease the volume)

CCD/PC1/PC2 (CCD/RGB input signal selection)

VIDEO (Video input signal selection)

RED +/- (Increase/decrease the red hue)

BLUE +/- (Increase/decrease the blue hue)

BRIGHT +/- (Increase/decrease the brightness)

SCROLL↑/↓ (Move the image up/down)

 
Remarks: FREEZE, TITLE, D./S. and SPLIT functions are only available on PROJECTOR OUT port.

### CONNECTIONS


#### Rear Panel




#### Side Panel



 1. Use one hand to hold the base of the visualiser, use the other hand to carefully lift up the camera stand of the unit.

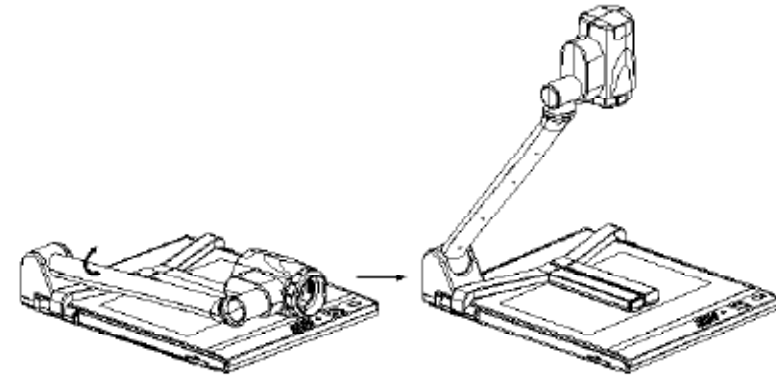

 2. Open the arm lights and rotate the camera head until they are in proper positions.

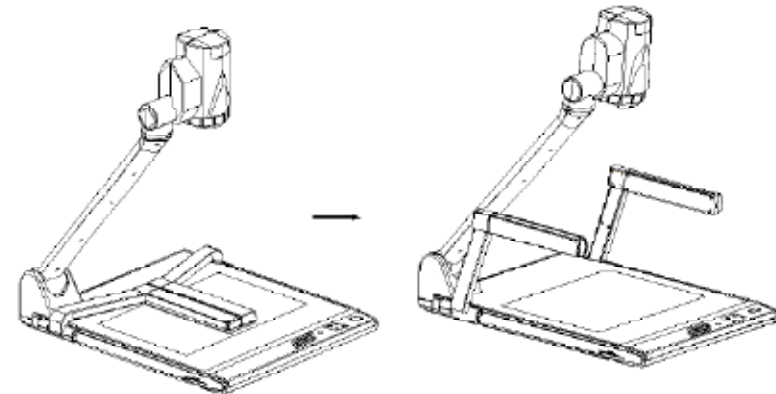


3. Making connections:

Before making any connection, turn off all the power, including power of the visualiser and the equipment to be connected.

Step 1: Connect power source.


First connect the power cord to the 12V IN connector.

## Step 2: Connect to the projector.

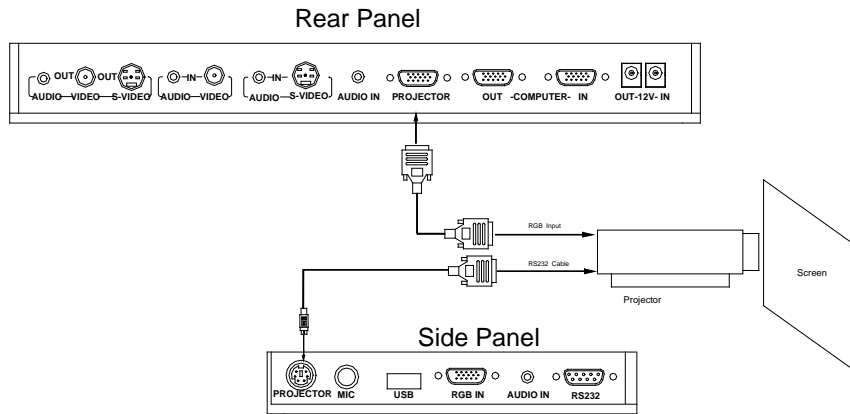 


Connect visualiser's PROJECTOR port to the RGB IN port of the projector port with the RGB cable provided together the visualiser. If you need control a projector with the visualiser, please use the projector RS232 cable (6-pin to 9-pin) to make the connection between the projector and the visualiser. Some projector models may require a converter cable in addition to this standard RS232 cable to connect to the projector control port, for the pin locations and shape of some projectors' control port connector may be different from the connector of a standard RS232 cable. After the visualiser is connected to the projector, you can control projector's power on, standby and input selection with the visualiser. (For projectors other than Hitachi, the Code Writing program that comes with the visualiser is required for this function.)

## Step 3: Connect to a desktop computer.

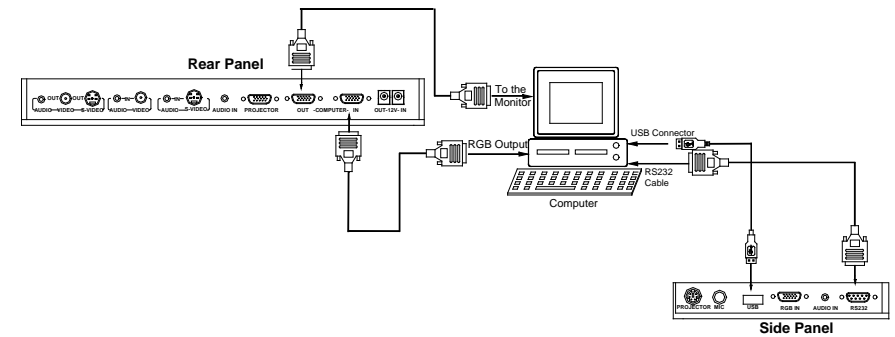 

 Note: You can connect a laptop computer to the RGB IN port of side panel with a RGB cable.

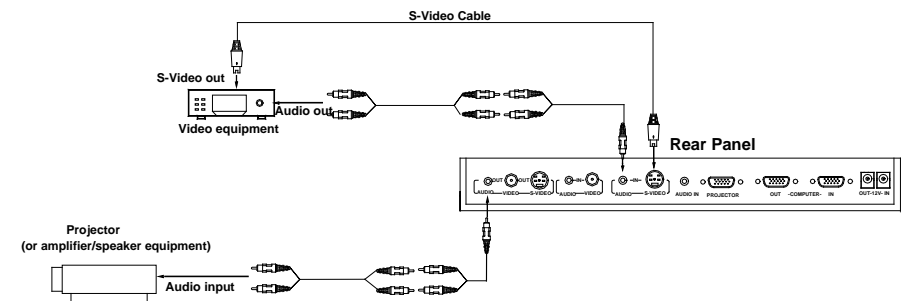


## Step 4: Connect video equipment with S-Video input.

Output of the S-Video signal from the visualiser to the projector is already done in the step 2, where the RGB cable comes out from the visualiser and goes to the projector. After the connections as steps 2, 3, 4 are made, input signals from the computer, visualiser CCD and S-Video are going to the RGB1 input on the projector and will be displayed on the projector screen as RGB1. These signals can be seen in turn when pressing "CCD/PC1/PC2" and "S-VIDEO/VIDEO" on the control panel of the visualiser.


Remarks: RGB IN signal can not go to S-VIDEO OUT or VIDEO

OUT port to be displayed on the screen.

 Step 5: Connect to the second video equipment with video input.

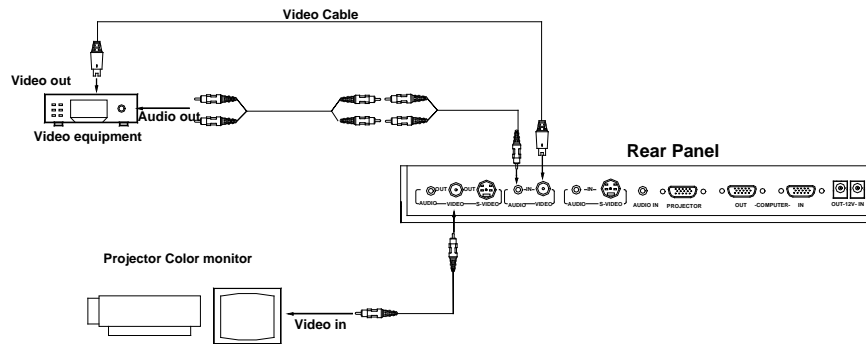

 Step 6: Connections for external control from the computer.

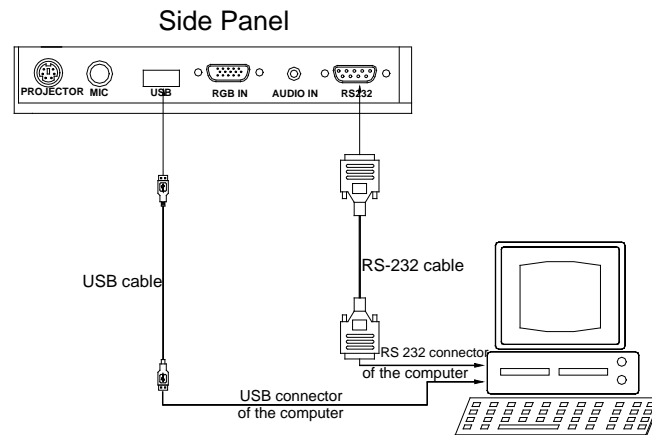

Use the computer RS232 cable (9-pin to 9-pin) to make the connections shown below to control the visualiser from an external computer. USB connection enables capturing still images / video streams from the visualiser to the computer. Special software is required for this operation.

4. Turn on the power by pressing the "POWER" button.

## OUTPUT MODE AND VERTICAL FREQUENCY (60Hz)

The RGB output can output a signal in the SVGA /XGA format.

In order to achieve the best picture quality you must set the outputs of the visualiser to match the native resolution of your display unit.

## PAL/NTSC VIDEO OUTPUTS


The S-Video and composite video outputs are set to PAL (NTSC) during manufacturing.

## INSTALLING VISUALISER SOFTWARE

This function is to snap and display images with the USB interface, which includes displaying static and dynamic pictures, snapping dynamic images and playing back the dynamic images with the Windows Media Player or its own player.

- A. Insert the CD-ROM that comes with your visualiser into the CD-ROM drive. If Auto run is enabled on your system, then the Software Setup window will be displayed automatically as below.



If it does not start automatically, after inserting the CD-ROM, Click [Start] -> [My Computer], and double click  (the CD-ROM drive letter might be different among different computer systems), then the above screen will appear immediately.

- B. Click the Install Code-Writing Program button to install Code-Writing Program.
- C. Click the Install DirectX9.0 button to install Microsoft DirectX 9.0.
- D. Click the Install Capture Program button to install the program that captures images in the AVI or Bitmap format.
- E. Click the Install USB Driver button to install the driver designed for the visualiser and will be used by the Capture Program.
- F. After the installation is finished, then click the Exit button to exit the Software Setup window.
- G. Shut down your computer when prompted so the changes will take effect.
- H. Use the USB cable to connect your computer to the visualiser before your computer is restarted.
- I. Turn on the visualiser.

Remarks: DirectX9.0 is not necessary to install, it is mainly for computer print screen function.

Please pay attention to the following:

1. Computer hardware requirement: CPU: Pentium 4, RAM: 256M or above, USB 2.0 port, Hard disk 40G or more
2. Operating system: Windows 2000 or above. If the operating system is Windows 2000, should install SP4. If the operating system is Windows XP, should install SP1.
3. Must use the high-speed USB cable provided together with the visualiser.
4. When connecting the visualiser to a desktop computer with the high-speed USB cable provided together, we recommend using the USB port on the rear of the mainframe as the USB port on the front of the computer might have interference.
5. You need to install the USB driver again when you change a computer's USB port. If this port has installed the USB2.0 driver, then there is no need to install it again.

6. When you open the capture program, but can not capture the image, please set the signal input source: click "Option" "Video Crossbar", and then set INPUT as S-Video IN.

#### **WORKING ON THE STAGE**

 
1. Place your material on the working surface.
2. Select the enlargement required with the " T " and " W " keys.
3. Adjust the focus with the Ⓜ "Near" and "Far" Ⓜ keys or "AUTO" key.

#### **WORKING OUTSIDE THE STAGE**

For showing 3-dimensional objects with the visualiser, just place them on the working surface and adjust the " T " or " W " and "AUTO" keys. If the object is too big for the stage or you want to show it from the side, just place it behind or in front of the unit and tilt the camera by hand (please take off the close-up lens first).


#### **ROTATE CAMERA HEAD**

The camera head can not rotate vertically and horizontally, the camera inside can be rotated horizontally by hand.

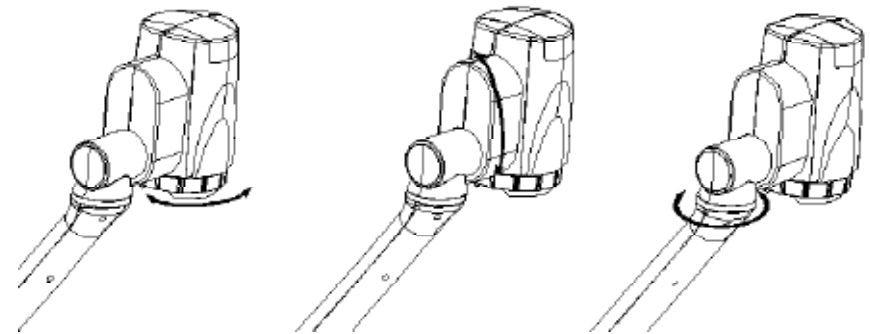

#### **LIGHT**

 The arm lights are on when the power is on. Each time you press the "LAMP" buttons, the lighting changes as below.

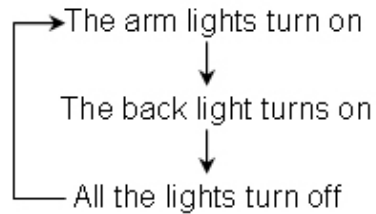

**ADJUSTING IMAGE SIZE**

In order to reduce or enlarge the image size displayed on the screen, press the " T " or " W " button.



**WIDE**



 
**TELE**

**WORKING WITH NEGATIVES**

The visualiser is automatically set to display normal materials on the screen when the power is on. To display negatives, turn on the backlight by pressing the "LAMP" key, and then press the "Neg" button to display the film negatives. Press the "Neg" button again to display normal materials in the colour mode.



**Positive**

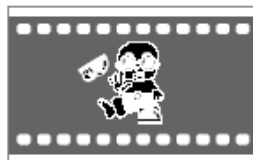

**Negative**

**FOCUSING**

When the visualiser is turned on the focus automatically adjusts to

the stage, it is not necessary to readjust the focus if you are only working with flat materials (text, photos, etc.). Only 3D objects require a focus adjustment. Press the "AUTO" button to auto focus. Press the "FAR" or "NEAR" button once to focus manually.

**FREEZING IMAGE**

Press the "Frz" button to freeze the image. When the output signal is RGB, in order to show a still image on the screen, press the "Frz" button. The frozen image can't be adjusted (Zoom in/out, colour adjustment, etc.).

Note: This function is not available on S-Video and Video output.

**BRIGHTNESS ADJUSTMENT**

If the image effect is not satisfactory, you can adjust the brightness to get a better image effect. Use the "BRIGHT +" or "BRIGHT -" button to adjust the brightness. To increase the brightness, press the "BRIGHT +" button. To decrease it, press the "BRIGHT -" button. To go back to the initial brightness press the "AUTO" button.

**WHITE BALANCE ADJUSTMENT**

Each time the lighting condition changes, the user should adjust the white balance of the CCD. Press the "AUTO" button to adjust the white balance automatically.

**AUTO ADJUSTMENT**

Press the "AUTO" button to auto adjust the white balance and the focus. The whole process takes about 10 seconds.

**TEXT/IMAGE MODE**

Press the "TEXT" button to switch between image/text modes. To display a text file, switch to the text mode to get a clearer text effect.

(On the remote control)

### **COLOUR AND B&W MODE SWITCH**

Press "B&W" once to enter the Black & White mode; Press again to return to the Colour mode.

### **SWITCH ABLE VIDEO INPUTS**

Press the "S-VIDEO/VIDEO" button to switch among S-Video and Video signals.

### **SWITCH ABLE RGB INPUTS**

Use the "CCD/PC1/PC2" button to switch among CCD and different RGB signals. Each time the "CCD/PC1/PC2" button is pressed, it provides seamless transitions among different sources such as Camera (CCD)COMPUTER(IN)and RGB (IN).

Notes: RGB OUT always outputs RGB IN signals.

### **PROJECTOR ON/STANDBY**

Press the "POWER" button to turn on the visualiser's power and press the "Ppw" button to turn the projector power on. To turn the projector to standby after use, press the "Ppw" button for more than 2 seconds, and then the projector enters the stand-by mode. (On the remote control, press the "PROJECTOR POWER" button)

Note: Please connect the projector RS232 cable between the projector and the visualiser first. If you cannot switch projector inputs by pressing this button, you need to manually program the RS232 code into the visualiser. See the section "Controlling Projector with Visualiser" for detailed instruction.

### **PROJECTOR INPUTS SELECTION**

 
When the projector is connected to several input sources, use the "Pin" button to switch signal inputs of the projector. (On the remote control, press the "PROJECTOR INPUT" button)

### **IMAGE REVERSION**

Press the "Mir" button once to V-reverse the image and the vertically mirrored image will be displayed. Press the "Mir" button again to exit. (On the remote control, please press the "MIRROR" button)

### **IMAGE SPLIT**

Press "SPLIT", the image will be split into two images. One is the current live image the other is a frozen snapshot of the last image, Press the "SPLIT" button again to exit.

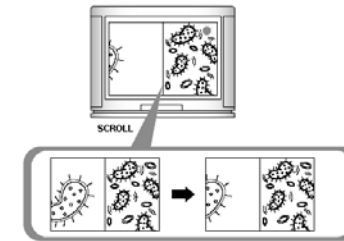

Note: This function is not available on S-Video and Video output.

### **DYNAMIC/STATIC MODE SWITCH**

To display dynamic images, Press the "D./S." button to switch to the Dynamic mode, the image will be clear and has no choppy strobe effect. To display still images, press the "D. / S." button switch to the Static mode.

Note: This function is not available on S-Video and Video output.

### TITLE FUNCTION

Press the "Title" button once and the image split into two parts, the upper 1/8 part of the image will freeze and stay on top 1/8 of the screen. Press "Title" button again to exit the Title mode.

Note: This function is not available on S-Video and Video output.

### IMAGE SAVE AND RECALL

Press the "SAVE" button once to save one captured image, it can save up to 7 images. After 7 images are saved, the 8th image will replace the previous 1st image and will become the new 1st saved image. (On the remote control)

Press the "RECALL" button once to display the saved images, then press the numerical button to show the corresponding image. For example: Press "2" to display the second image. At this status, the function under each numeric key is not available. Press "RECALL" again to exit this mode. (On the remote control)

### INFRARED REMOTE CONTROL

The remote control can control the camera from different angels. Please note that an infrared remote control can only be used up to a certain distance from the unit. Objects situated between the visualiser and the infrared remote control and a weak battery may interfere with the reception.

On the left side of the visualiser stage, there is a built-in remote control storage compartment where you can store the remote control when not in use.

### IMAGE SCROLLING

Press the "↑" button to scroll the image down to display the upper part of the image. Press the "↓" button to scroll the image up to display the lower part of the image.

### USB PORT

The USB port can be used to transfer still images from the visualiser to a computer. No additional computer hardware is required. In this way, the visualiser can be used as a 3-D scanner for your computer.

Connect the visualiser to your computer with the supplied USB cable.


The visualiser software is available on the supplied CD-ROM.


### CONTROLLING THE VISUALISER FROM A COMPUTER

You can control the visualiser from a computer connected with a RS232 connector.


- A. Connect the computer and the visualiser with the computer RS-232 cable (9-pin to 9-pin).
- B. Select [Start] -> [Program] -> [VideoCap] -> "VideoCapx.xx" (x.xx is software's version) to open the software.
- C. Click "Control Panel" under "Capture".
- D. Select the COM port COM1 or COM2 and you can control the visualiser by clicking the buttons on the menu.

### Toolbar

Control :  Control the visualiser by a computer through RS232 cable.

Capture one frame :  Capture the current preview image and save it to the desired path.

Full Screen :  Full screen display the preview content, left double click to exit.

Start Capture :  Start to video capture

Stop Capture :  Stop video capture


### VIDEO DISPLAY AND CAPTURE

You can capture and control images on the visualiser from

computer connected with a USB connector.



Click [Start] -> [Program] -> [VideoCap] -> "VideoCapx.xx" (x.xx is software's version) to open the software.

#### A. Static Images Snap

Click "Capture"—>"Capture Frame", input the file name in dialogue box, or you can click  icon on the toolbar, then input file name in dialogue window. The image file is

format.

#### B. Snap Video Stream

Click "Capture"—> "Start Capture", input the file name in dialogue box, or click  icon on the toolbar, then input the file name in dialogue box. If you want to set the time limit for the capture, select "Capture" ->"Set Time Limit" to set the time limit. Click "Start Capture" to start capture, and click "Stop Capture" or "" icon on the toolbar to stop

capture. (If you have set the time limit, it will stop automatically when the time is up.)

The video file is AVI format.

#### C. Set the Frame Rate

Click [Capture] -> [Set Frame Rate], and click open "Choose Frame Rate" to set the frame rate.

#### D. Set Time Limit


Click [Capture] -> [Set Time Limit] to set the time limit while capturing video.

### **CONTROLLING PROJECTOR WITH VISUALISER**

The code writing software is used to inputting projector's control code, then can control various projector with the visualiser.

1. Connect the visualiser to the projector with the RGB□VIDEO□S-VIDEO cables.

2. Connect the RS232 cable to the computer's connector. The visualiser's RS232 port is located on its right side.

3. After completion of the connection, turn on the visualiser  Visualiser Code-Writing click [start] -> [All Programs] -> Visualiser -> and the following dialogue box appears as below:



When the indicator of "Current RS-232 Connection Status" is green, that means the connection between the visualiser and the computer's RS232 connector is good. If the indicator is red, please check if the RS232 cable is connected correctly. When all the cables are connected correctly, please click "Projector" to select your projector model under the drop-down list, then click "Send". If you can not find your particular projector model in the "Projector", please do the following:

1) Select "Baud rate" and "parity" and input the projector control code. (The baud rate, parity and control code is supplied by projector's manufacturer, please refer to the projector' manual)



The input format of projector's control code is as follows:

a. If the data is in the numerical value format, please input data directly, block them off with comma, do not distinguish lowercase and uppercase.

 
For example: the "POWER ON" code in Hitachi projector manual is :

BE EF 03 06 00	BA D2	01 00	00 60	01 00
----------------	-------	-------	-------	-------

In the POWER ON box, Input : be, ef, 03, 06, 00, ba, d2, 01, 00, 00, 60, 01, 00. Then use the same input rule to input other code.

b. If the data is in the character string format, input 'character string'.

For example: the "POWER ON" code in the SHARP C40/50 projector manual is :



("-" is space ← is enter.)

In the POWER ON box, input 'POWER 1', 0d, 0a

(Remarks: There are 3 spaces after POWER, 0d, 0a is enter.)

Input other codes in the same way.

c. If the data is in the numerical value and character format, then synthesize the above-mentioned formats.

3) Once done, click "Add" to add your projector model, then Click "Send".

 
Afterward, click "Ok". Now, you can use the visualiser to control your projector.

4. Connect the visualiser's projector control port to the RS232 port

with a RS232 cable Please disconnect the computer from the RS232 port first. Then use buttons on the operation panel to control the projector.

The visualiser provides a 6-pin to 9-pin RS232 cable. If this cable does not match to your projector's RS232 port, an additional RS232 cable is needed. This additional RS232 cable can be made based on the pin location of the projector's RS232 control port. The pin locations of the visualiser are: the pin 1 is RXD (Received Data); the pin 5 is TXD (Transmitted Data); the pin 4 is GND (Ground). Other pins are not defined. The pin location information of the projector is provided by the projector's manufacturer. The projector's RS232 control port normally has RXD pin, TXD pin and GND pin, the name may be different. The parallelism of each data pin is shown as follows:

Visualiser's RXD pin-----Projector's TXD pin  
 Visualiser's TXD pin-----Projector's RXD pin  
 Visualiser's GND pin-----Projector's GND pin

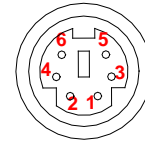

5. If you can not use buttons on the operation panel to control the projector, please use Code-Writing software's projector control code testing function to check if the control code is correct.

Click "Projector" button, the following dialogue box appears as below:



Connect the visualiser to a computer with a RS232 cable (Please disconnect the projector from the RS232 port first) and select the Baud Rate and Parity based on the projector's Baud Rate, then click the "TEST" button to pop up the Projector Code Test dialogue box, input the Baud Rate and Parity based on the projector's Baud rate, then click "Open".




Click the projector control buttons on the visualiser's operating panel to check if the control code that the program received is the same as the sending code. If the receiving code is same to the sending code, the input codes are correct. If the visualiser can not control the projector, please do the following.


1. Check to see if the source control codes of projector are correct.
2. Check to make sure the connection between the visualiser and the projector is correct.

#### FOLDING THE UNIT

 1. Fold the right arm light down first onto the base, then the left arm down.

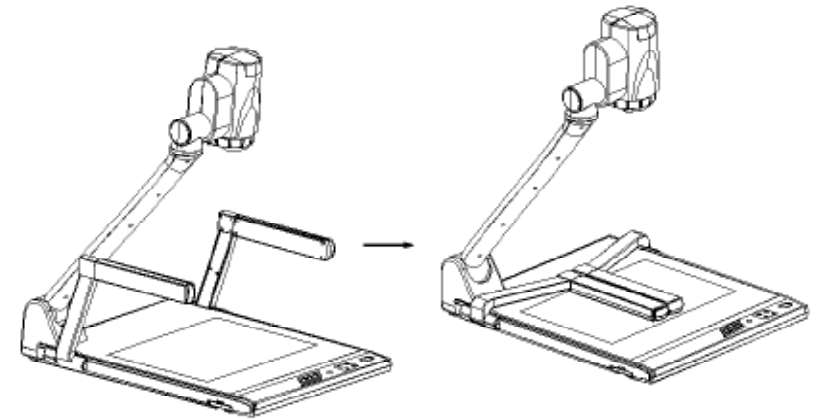


 2. Rotate the camera head clockwise until the camera head is parallel to the camera stand, carefully Fold the camera stand down to the front panel.

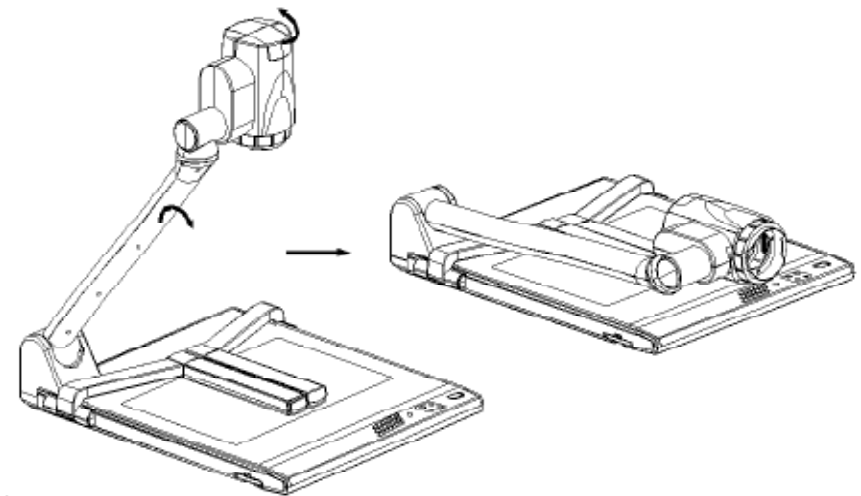

#### Cautions:

 - a. Don't lay the unit down flat.
- b. Don't try to stand it on its rear or sides.
- c. Don't try to pick up this unit by pulling the camera stand.

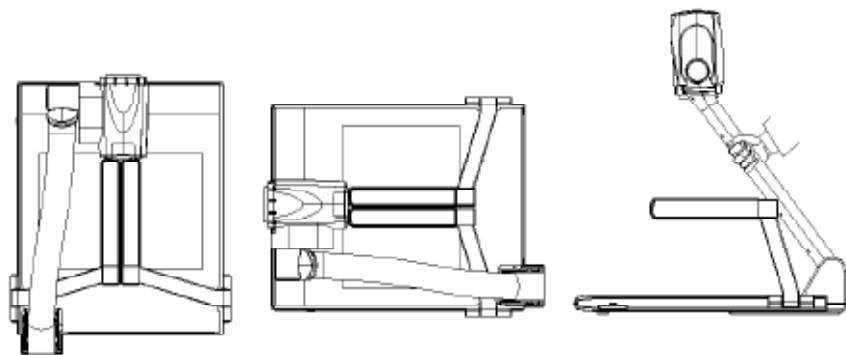

**NOT THIS WAY  
SPECIFICATIONS**

Colour system	PAL system
Pickup device	1/4" professional CCD
Resolution	XGA (1024x768), SVGA (800x600)
Total Pixels	470,000
RGB Output pixels	780,000
Lens	22x optical zoom, 10x digital zoom
Focus/Iris	Auto/manual selectable
White balance	Auto
Image split	Yes
Negative/positive conversion	Yes
Black/white and colour selection	Yes
Image freeze	Yes
Mirror	Yes
Lights	Arm light: 1.5W LED lamps x 2
	Back light: 4 W LED lamps
Input connections	C-Video: RCA jack 1
	S-Video: 4 pin mini Din 1

	Audio: Mini jack 2
	MIC: Mini jack 1
	PC Audio: Mini jack 2
	RGB: DB15FLC2
Output connectors	RGB: DB15FLC2
	C-Video: RCA jack 1
	S-Video: 4 pin mini Din 1
	Audio: Mini jack 1
Operating System	Window 2000/XP
USB connector	30 frames/sec
RS-232 connector	9-pin, D-Sub, male/6-pin PS/2
USB port	USB 2.0
Power requirements	12V/4A external AC adaptor
Dimensions (WxDxH)	Folded: 20.0"x16.1"x4.7"
	Setup: 20.0"x20.9"x22.4"
	Packing: 25.6"x21.3"x9.1"
Weight	N.W: 5.5g (12.1lbs)
	G.W: 9.5g (20.9lbs)
Accessory	AC power cord RGB cable Audio/Video cable Computer RS232 cable (9-pin to 9-pin) Projector RS232 cable (6-pin to 9-pin) USB cable Audio convert cable AC adaptor User's manual Software CD Infrared remote control Warranty card

\* Design and specifications are subject to change without notice.